

4. Stop Light and Brake Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from stop light and brake switch, and then remove the switch. <Ref. to BR-52, REMOVAL, Stop Light Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the brake switch (A) and stop light switch (B) resistance.

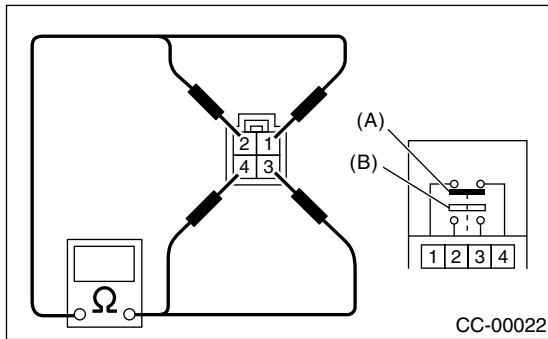

| Switch | Pedal | Terminal No. | Standard value |
|------------|-----------|--------------|----------------|
| Brake | Released | 1 and 4 | Less than 1 Ω |
| | Depressed | 1 and 4 | More than 1 MΩ |
| Stop light | Released | 2 and 3 | More than 1 MΩ |
| | Depressed | 2 and 3 | Less than 1 Ω |

If NG, replace the stop light and brake switch.