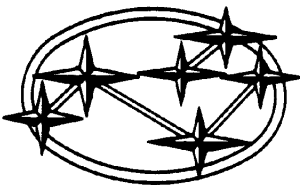
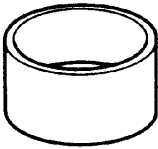
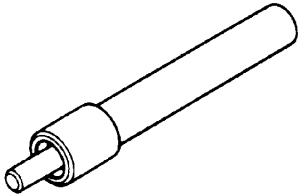
 



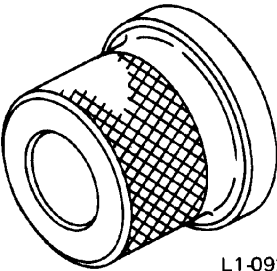
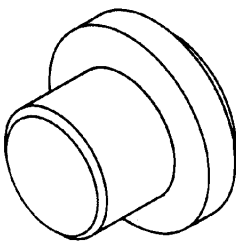
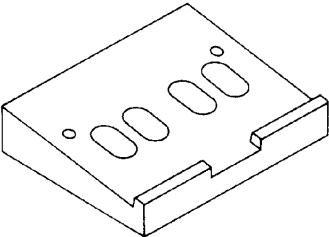
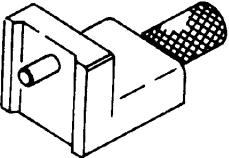
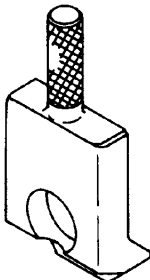
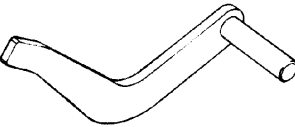



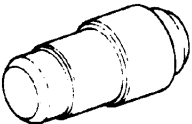
 
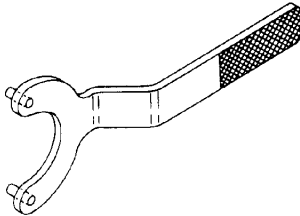
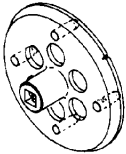
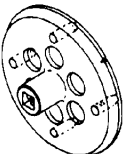
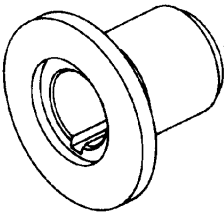
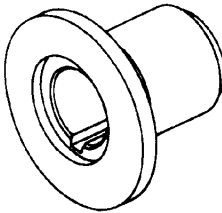
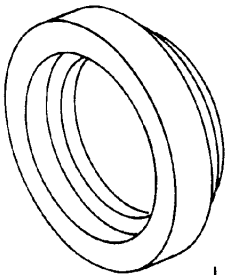
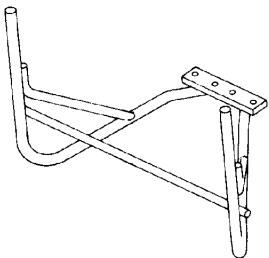
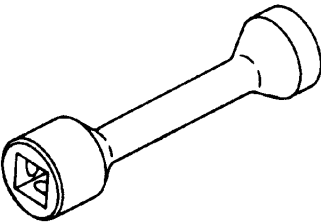
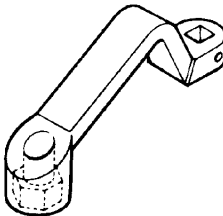
SUBARU
1988

	Page
ENGINE TOOLS	2
MANUAL TRANSMISSION AND DIFFERENTIAL TOOLS	4
AUTOMATIC TRANSMISSION AND DIFFERENTIAL TOOLS	9
REAR WHEEL DRIVE SYSTEM (4WD MODELS) TOOLS	11
SUSPENSION TOOLS	13
WHEELS AND AXLES TOOLS	14
STEERING SYSTEM TOOLS	16
BRAKES TOOLS	19
AIR CONDITIONING SYSTEM TOOLS	20
BODY TOOLS	21

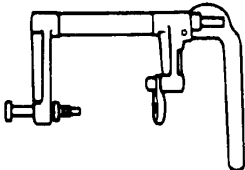
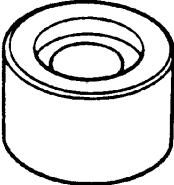
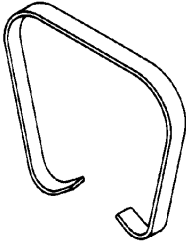


Engine Tools

398744300	398852100	399094310	399284300
PISTON GUIDE	OIL SEAL INSTALLER	PISTON PIN REMOVER ASSY	PISTON PIN GUIDE
Used to install piston in cylinder.	For press-fitting of intake and exhaust valve guide oil seals.	Used to remove piston pins by inserting this tool through crankcase plug holes. 1800 cc model	Used to install piston pin in piston and connecting rod. 1800 cc model
 A5-155	 ST-054	 A5-143	 A5-156
399762103	399762104	498027000	498037000
VALVE GUIDE REMOVER	VALVE GUIDE REAMER	CAMSHAFT HOLDER	INSTALLER
For removing of valve guide.	For reaming of valve guide.	Used to hold camshaft when press-fitting distributor gear to camshaft.	Used to install camshaft oil seal.
 A5-147	 A5-150	 L1-092	 L1-093
498267100	498277000	498497000	499007000
CYLINDER HEAD TABLE	FLYWHEEL STOPPER CP	DRIVE PLATE STOPPER	TENSIONER WRENCH
For replacing of valve guide.	Used to stop rotation of flywheel when loosening and tightening crankshaft pulley bolt, etc. Manual transmission vehicle	Used to stop rotation of drive plate when loosening and tightening crankshaft pulley bolt, etc. Automatic transmission vehicle	Used to hold up tensioner No. 2 when reducing timing belt tension. 1800 cc model
 L1-094	 L1-095	 L1-096	 L1-276

 


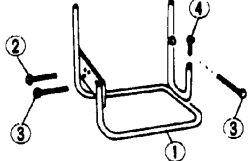
* 499017000	499037000	* 499097300	49920700
PISTON PIN GUIDE	REMOVER & REPLACER	PISTON PIN REMOVER ASSY	CAMSHAFT SPROCKET WRENCH
Used to install piston pin in piston and connecting rod.	Connecting rod bushing	Used to remove pins by inserting through crank-case plug holes.	Used to remove and install camshaft sprocket. 1800 cc model
 A5-156	 A5-389	 A5-143	 L1-187
499437000	* 499437100	499567000	* 499567100
BELT TENSION WRENCH CP	BELT TENSION WRENCH CP	INSTALLER	INSTALLER
When installing timing belt, used to apply the specified torque to camshaft pulley so as to get the specified belt tension. 1800 cc model	When installing timing belt, used to apply the specified torque to camshaft pulley so as to get the specified belt tension. 2700 cc model	Used to install crankcase front oil seal. 1800 cc model	Used to install crankcase front oil seal.
 L1-188	 L1-188	 L1-100	 L1-100
499587000	* 499817100	499987200	499990110
INSTALLER	ENGINE STAND	SOCKET WRENCH (17)	SOCKET
Used to install crankcase rear oil.	Stand used for engine disassembly and assembly. Two pieces are needed. This tool can be made by modifying the former one (499817000).	For retightening cylinder head. 1800 cc model	Oxygen (O ₂) sensor.
 L1-101	 L1-102	 L1-103	 A10-133


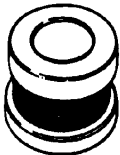

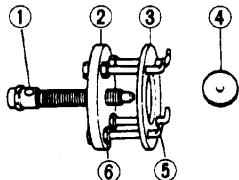
 
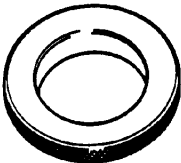
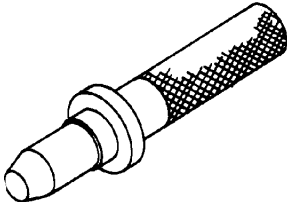
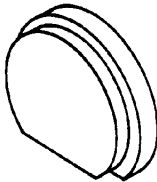
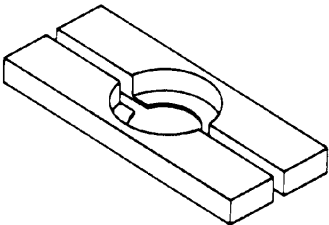

 

* Newly adopted tool

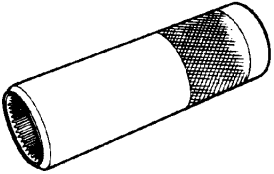
 

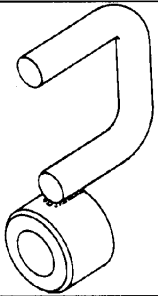
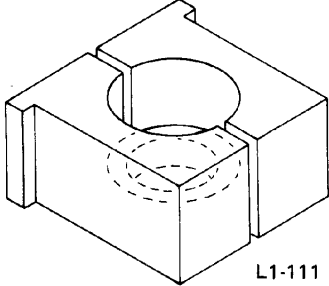
 
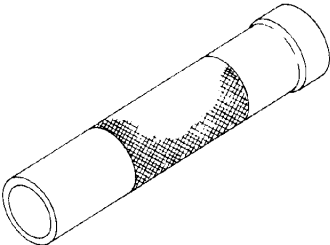
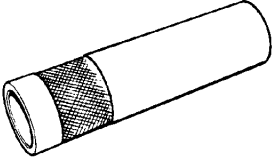
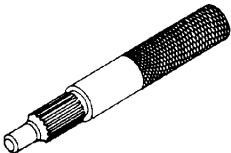
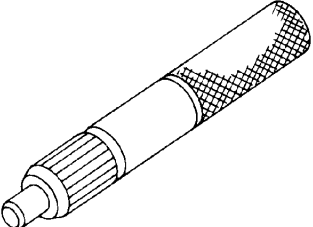
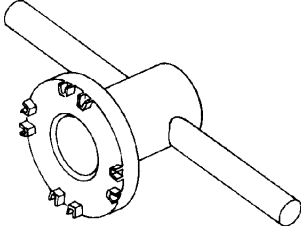
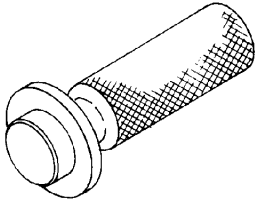
899724100	899768603	* 13082AA000
VALVE SPRING PRESS ASSY	VALVE GUIDE ADJUSTER	BELT ADJUSTER STOPPER
Used to remove and install valve spring.	Used to install intake and exhaust valve guides.	Used to compress belt tensioner rubber boot (of adjuster COMPL) for easy installation of belt. 2700 cc model
 A5-149	 A5-149	 L1-568

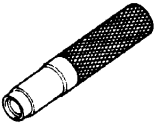
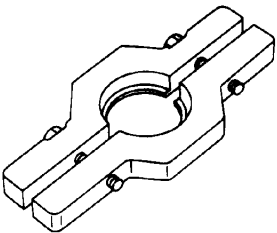
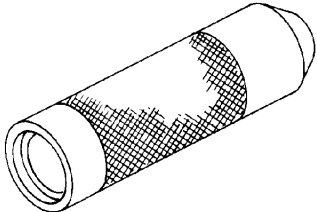
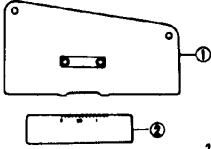
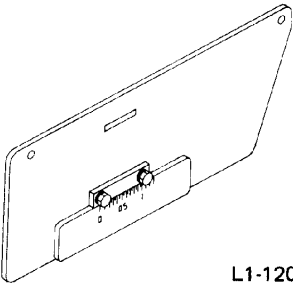

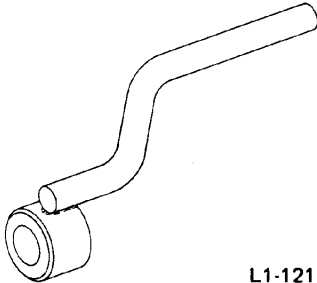
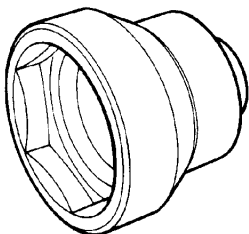
 

 

* Newly adopted tool

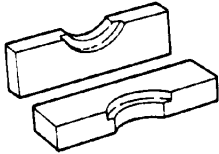


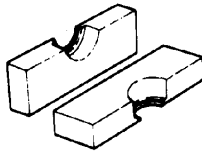


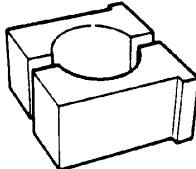


Manual Transmission and Differential Tools

398405200	398791600	398791700	399295120
STAND	REMOVER II	REMOVER II	STAND SET
Rear drive shaft. 4WD	Straight pin (Transfer shifter fork).	Spring pin (5-speed)	Transmission main case.
 ST-144	 A12-174	 A12-174	 1 STAND CP (399935120) 2 BOLT (016510600) ... 10 x 60 mm 3 BOLT (016510700) ... 10 x 70 mm 4 BOLT (016510400) ... 10 x 40 mm ST-169

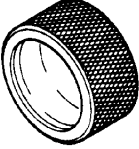

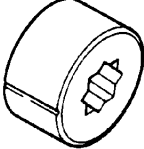

 

 
 
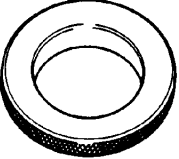
 
 

399411700	399513600	399520105	399527700
INSTALLER	INSTALLER	SEAT	PULLER SET
Reverse shifter rail arm.	Extension rear oil seal. 4WD	Roller bearing (Differential). FWD	Roller bearing (Differential). 4WD
 A12-170	 A13-196	 A12-171	 <p>1 BOLT (899521412) 2 PULLER (399527702) 3 HOLDER (399527703) 4 ADAPTER (399497701) 5 BOLT (899520107) 6 NUT (021008000)</p> A14-075
399780104	399790110	498057000	498067000
WEIGHT	INSTALLER	OIL SEAL INSTALLER	TRANSFER RACE PRESS
Preload on roller bearing.	Roller bearing, (Differential) Axle shaft oil seal. FWD	Transfer case oil seal. 4WD	Transfer race. 4WD
 A12-172	 A12-175	 L1-105	 L1-108
498077000	498147000	498247001	498247100
5TH DRIVE GEAR REMOVER	DEPTH GAUGE	MAGNET BASE	DIAL GAUGE
5th driven gear. 4WD	Main shaft axial end play adjustment	Backlash between side gear and pinion, Hypoid gear backlash.	Backlash between side gear and pinion, Hypoid gear backlash.
 L1-109	 ST-146	 ST-156	 ST-157

 
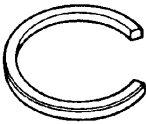
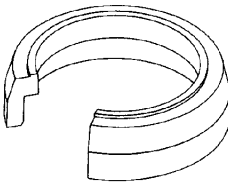
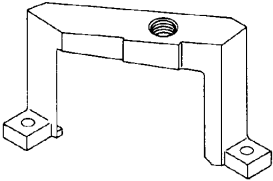
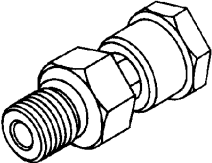
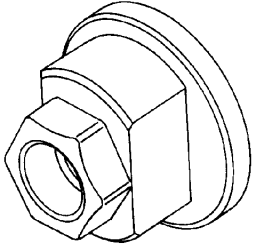
 
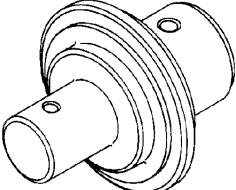
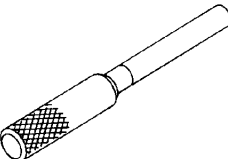
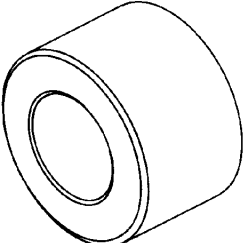
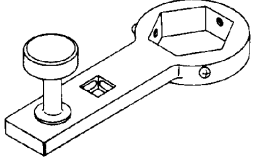
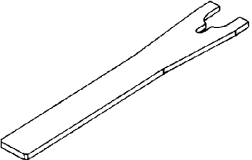
498427000	498517000	498787000	498787100
STOPPER	REPLACER	STOPPER	MAIN SHAFT STOPPER
For securing the drive pinion shaft ASSY and driven gear ASSY when removing the drive pinion shaft ASSY lock nut (18 x 13.5). 4WD	Drive pinion thrust plate and needle bearing race. FWD	Transmission main shaft. FWD	Transmission main shaft. 4WD
 L1-388	 ST-151	 A12-173	 L1-110
498937000	499277000	499277100	499277200
TRANSMISSION HOLDER	INSTALLER	BUSH 1-2 INSTALLER	INSTALLER
Transmission main shaft lock nut. 4WD	Drive pinion. FWD	1st driven gear thrust plate. 1st-2nd driven gear bush. 4WD	For press fitting the 2nd driven gear, roller bearings, & 5th driven gear onto the driven shaft. 4WD
 L1-111	 A12-296	 L1-113	 L1-391
499747000	499747100	499787000	499797000
GUIDE	CLUTCH DISC GUIDE	WRENCH ASSY	OIL SEAL INSTALLER
Clutch disc. FWD	Clutch disc. 4WD	Differential side retainer. 4WD	Differential side retainer oil seal. 4WD
 ST-170	 L1-114	 L1-117	 L1-118


 
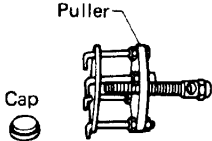

499827000	499857000	499877000	499917100
PRESS	REMOVER ASSY	RACE 4-5 INSTALLER	GAUGE ASSY 2
Oil seal (Speedometer).	To remove the driven gear ASSY 5th gear.	Needle bearing 4th and 5th races. Transmission main shaft rear ball bearing.	Drive pinion shim.
	4WD	4WD	FWD
			
ST-147	L1-569	L1-119	1 Plate 2 Scale A12-188
499917500	499927000	499927100	499987300
DRIVE PINION GAUGE ASSY	HANDLE	HANDLE	SOCKET WRENCH (50)
Drive pinion shim adjustment.	Transmission main shaft.	Transmission main shaft.	To remove the driven gear ASSY lock nut.
4WD	FWD	4WD	4WD
			
L1-120	A12-189	L1-121	L1-389
898938600	899474100	899524100	899580100
HOLDER	EXPANDER	PULLER SET	INSTALLER
Transmission main shaft.	Snap ring (Transmission main shaft).	Roller bearing (Differential).	Transmission main shaft Drive pinion, Ball bearing (Rear drive shaft).
FWD	4WD	FWD	
			
A12-176	A12-178	A5-142	A12-179

899714110	899754110	899754112	899858600
RETAINER	PRESS ASSY	PRESS	RETAINER II
Transmission main shaft, Drive pinion, Rear drive shaft.	Transmission main shaft, Needle bearing (transfer case), Rear drive shaft 4WD	Clutch release bearing holder. (Except 4WD) FWD	Transmission main shaft, Drive pinion. FWD
 A12-181	 A12-182	 A11-025	 A12-183
899864100	899874100	899884100	899904100
REMOVER	INSTALLER	HOLDER	REMOVER
Transmission main shaft, Drive pinion.	Transmission main shaft, Drive pinion, Transfer drive gear bushing.	Drive pinion, Rear drive shaft, Extension ASSY	Straight pin (Differential)
 A12-184	 A12-185	 A12-186	 A12-187
899988608			
SOCKET WRENCH (27)			
Transmission main shaft (FWD) Rear drive shaft (4WD)			
 A12-191			

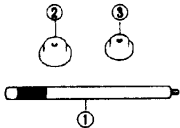
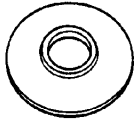
 

 
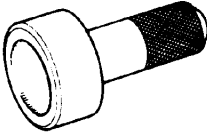
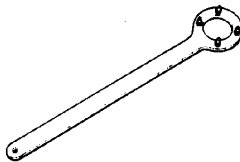
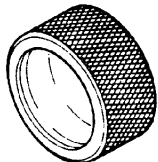
Automatic Transmission and Differential Tools

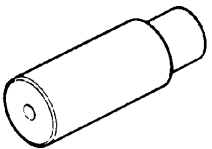

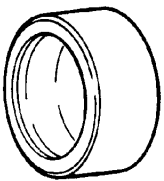

 

 
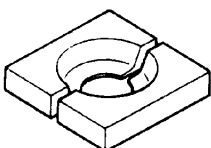
 
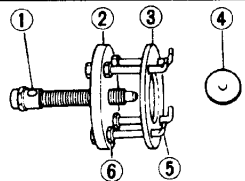
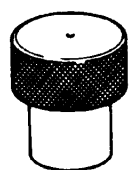

398437700	398573600	398603610	398643600
DRIFT	OIL PRESSURE GAUGE ASSY	SOCKET	GAUGE
Front oil seal for converter case.	Oil pressure.	Brake band.	Used to adjust drive pinion. • Oil pump clearance • Total end play
			
A14-046	A13-201	A13-209	A13-211
398673600	399520105	399703600	399780111
COMPRESSOR	SEAT	PULLER	WRENCH
Snap ring for clutch piston retainer.	Roller bearing (Differential)	<ul style="list-style-type: none"> • Used to install band servo piston to case. • Used with COMPRESSOR (498677000). 	Axle shaft oil seal holder.
			
A13-208	A12-171	A13-186	A12-168
399790110	399893600	498247001	498247100
INSTALLER	PLIER	MAGNET BASE	DIAL GAUGE
Roller bearing (Differential)	Snap ring for spring retainer.	Backlash of gears.	Backlash of gears.
			
A12-175	A13-207	ST-156	ST-157


 

498517000	498627000	498627100	498677000
REPLACER	SEAT	SEAT	COMPRESSOR
Drive pinion front roller bearing.	Snap ring for clutch piston spring retainer.	Used to hold overrunning clutch piston retainer (return spring) when installing snap ring. 4AT	Band servo piston. 4AT
			
ST-151	A13-210	L1-502	L1-503
498897100	498937100	499095500	499247300
ADAPTER CP	HOLDER	REMOVER ASSY	INSTALLER
Used when checking oil pressure, etc. 4AT	<ul style="list-style-type: none"> Used to tighten/loosen M30 lock nut for drive pinion. Used when measuring tooth contact pattern. 4AT	<ul style="list-style-type: none"> Used to extract axle drive shaft from differential ASSY. Used with INSTALLER (499247300) 4AT	Drive pinion oil seal. 4AT
			
L1-504	L1-498	L1-499	L1-500
499267300	499577000	499787100	499787300
STOPPER PIN	GAUGE	WRENCH ASSY	WRENCH
Used to align range selector lever/inhibitor switch. 4AT	Transfer end play. 4AT	<ul style="list-style-type: none"> Used to tighten/loosen M30 lock nut for drive pinion. Used when measuring hypoid gear backlash. 4AT	Manual shaft. 4AT
			
L1-508	L1-509	L1-501	L1-510

499827000	499897000	899524100	899580100
PRESS	PLIERS	PULLER SET	INSTALLER
Speedometer shaft oil seal.	Snap ring.	Reduction driven gear.	Ball bearing for rear drive shaft.
			
ST-147	A13-519	A5-142	A12-179

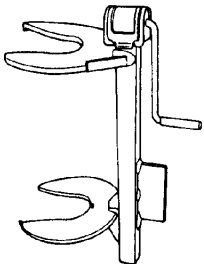
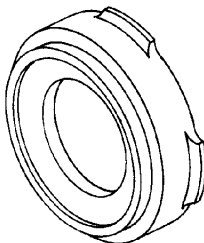
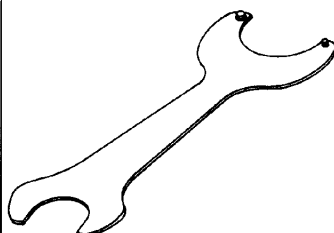
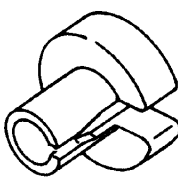
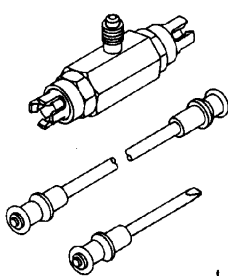
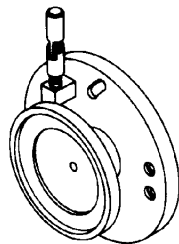
Rear Wheel Drive System (4WD Models) Tools

397471600	398177700	398217700	398227700
HANDLE & DRIFT KIT	INSTALLER	ATTACHMENT SET	WEIGHT
Front and rear bearing cup.	Rear bearing cone.	Differential case.	Side bearing.
 <p>1 HANDLE (398477701) 2 DRIFT (398477702) 3 DRIFT 2 (398477703)</p>			
ST-143	A14-085	A14-084	A14-087
398237700	398417700	398427700	398437700
GAUGE	DRIFT	FLANGE WRENCH	DRIFT
Side bearing.	Oil seal.	Companion Flange	Oil seal.
			
A14-086	A14-045	A14-043	A14-046

398457700	398467700	398487700	398507701
ATTACHMENT	DRIFT	DRIFT	GAUGE
Side bearing retainer.	Drive pinion, Pilot bearing, Front bearing cone.	Side bearing cone.	Pinion height adjustment.
			
A14-047	A14-049	A14-088	A14-080
398507702	398507703	398507704	398517700
DUMMY SHAFT	DUMMY COLLAR	BLOCK	REPLACER
Pinion height and Preload adjustment.	Pinion height and Preload adjustment.	Pinion height and Preload adjustment.	Rear bearing cone.
			
A14-081	A14-082	A14-083	A14-076
398527700	399527700	399780104	899580100
PULLEY ASSY	PULLER SET	WEIGHT	INSTALLER
Oil seal, Side bearing cup.	Side bearing cone.	Front bearing cone, Pilot bearing, Companion flange.	Front bearing cone, Pilot bearing.
	 <p>1 BOLT (899521412) 2 PULLER (399527702) 3 HOLDER (399527703) 4 ADAPTER (398497701) 5 BOLT (899520107) 6 NUT (021008000)</p>		
A14-044	A14-075	A12-172	A12-179

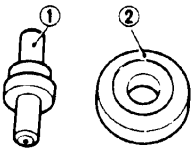
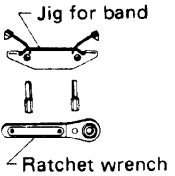
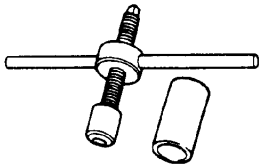
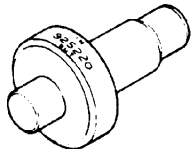
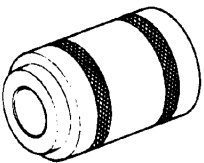
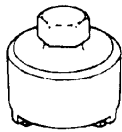
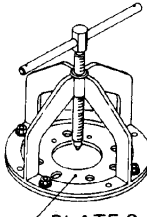
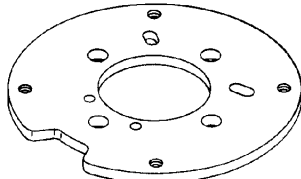
899874100	899904100	925560000
INSTALLER	STRAIGHT PIN REMOVER	WRENCH
Companion flange.	Differential pinion shaft lock pin.	Differential spindle set bolt.
		
A12-185	A12-187	ST-032

Suspension Tools

926110000	926500000	926510000	926520000
COIL SPRING COMPRESSOR	ADAPTER	SPANNER	AIR PIPE REMOVER
Used to remove and install coil spring.	Camber & caster gauge.	Used to disassemble and assemble front strut ASSY or front air suspension ASSY.	Used to disconnect air pipe from joint.
Except Air Suspension	1800 cc model		For Air Suspension
			
E1-076	L1-122	L1-123	L1-124
926940000	* 927050000		
3-WAY JOINT ASSY	ADAPTER		
Used as an adapter for gauge manifold of air conditioning system to measure pressure.	Camber & caster gauge.		
For Air Suspension	2700 cc model		
			
L1-434	L1-570		

* Newly adopted tool

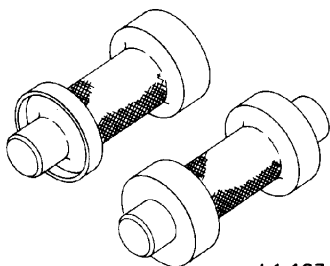
Wheels and Axles Tools

921130000	925091000	925130000 *1	925220000
INSTALLER	BAND TIGHTENING TOOL	INSTALLER	INSTALLER
Brake Drum Bearing (Outer) FWD	D.O.J. Boot B.J. Boot	Front axle shaft.	Brake Drum Bearing (Inner)
 <p>1 Shank 2 Base</p> <p>A16-052</p>	 <p>Jig for band Ratchet wrench</p> <p>A15-171</p>	 <p>A16-047</p>	 <p>A16-151</p>
925530000	925550000	926470000 *2	926480000 *2
INSTALLER	WRENCH	AXLE SHAFT PULLER	AXLE SHAFT PULLER PLATE
Oil Seal 4WD	Rear Axle Ring Nut 4WD	Used to remove front axle shaft or brake drum.	Same as plate 2 included in AXLE SHAFT PULLER (926470000). Available as spare parts. 1800 cc model
 <p>A16-154</p>	 <p>A16-053</p>	 <p>PLATE 2</p> <p>L1-125</p>	 <p>L1-126</p>

926490000

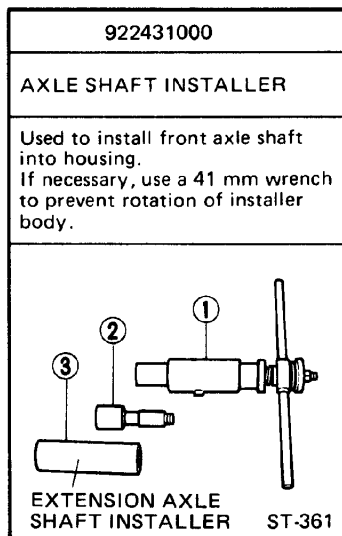
INSTALLER

Used to install bearing and oil seal into front housing.

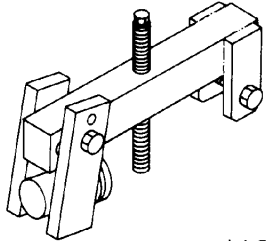
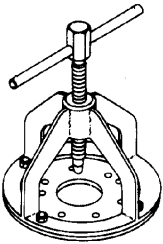
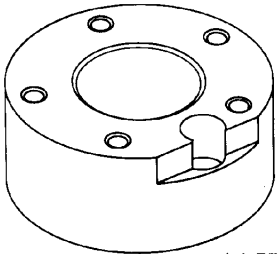
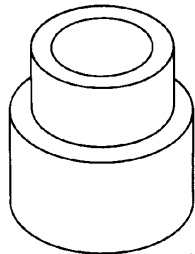
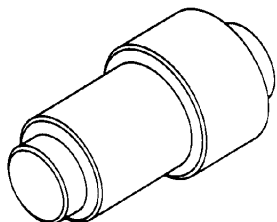
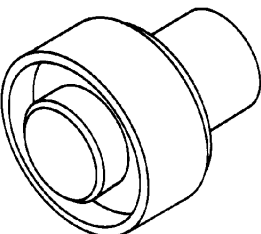
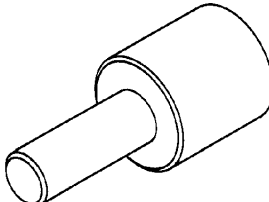
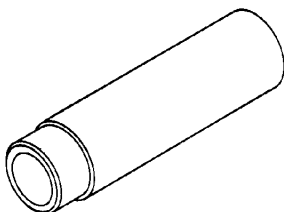
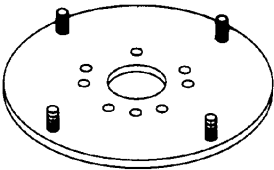


L1-127

*1 AXLE SHAFT INSTALLER (922431000) can be used instead of this INSTALLER (925130000).



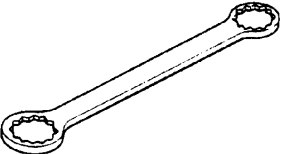
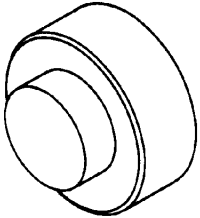
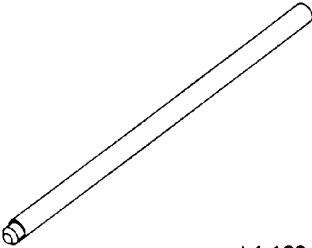
*2 Former PULLER (921122000) can be used instead of PULLER (926470000) by replacing its plate 2 with PLATE (926480000)

* 927060000	* 927070000	* 927080000	* 927090000
HUB PULLER	AXLE SHAFT PULLER	HUB STAND	HOUSING STAND
Used to remove front hub.	Used to remove front axle shaft.	Used when disassembling and assembling hub ASSY.	Used in combination with BEARING PULLER (927100000) to disassemble/reassemble housing bearing.
2700 cc model	2700 cc model	2700 cc model	2700 cc model
 L1-575	 L1-576	 L1-577	 L1-578
* 927100000	* 927110000	* 927120000	* 927130000
BEARING PULLER	OIL SEAL INSTALLER	HUB INSTALLER	EXTENSION AXLE SHAFT INSTALLER
Used to disassemble/reassemble housing bearing.	Used to install oil seal into housing.	Used as a bearing pad when pressing hub into place.	Used in combination with AXLE SHAFT INSTALLER (922431000) to install front axle shaft on hub.
2700 cc model	2700 cc model	2700 cc model	2700 cc model
 L1-579	 L1-580	 L1-581	 L1-582
* 927140000			
AXLE SHAFT PULLER PLATE			
Same as plate 2 included in AXLE SHAFT PULLER (926470000). Available as spare parts.			
2700 cc model			
 L1-583			

* Newly adopted tool

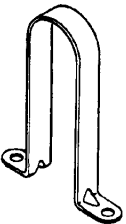
 
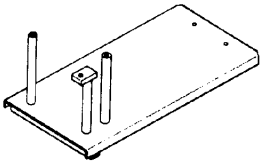
Steering System Tools

1. Manual Steering

 
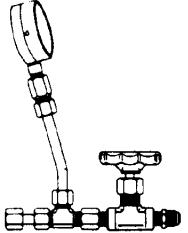
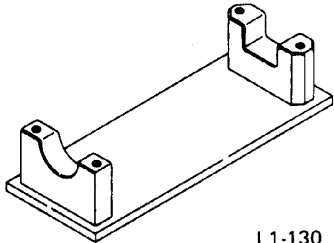
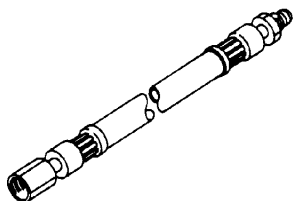
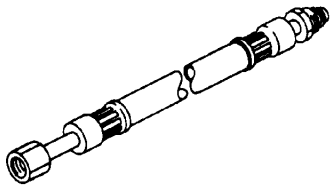
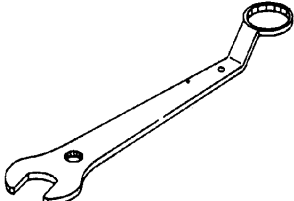
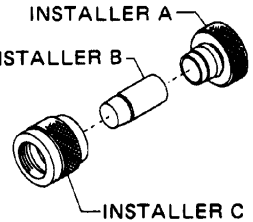
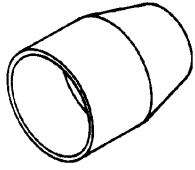
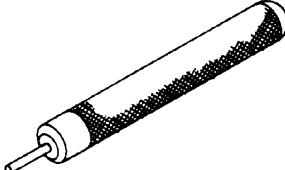
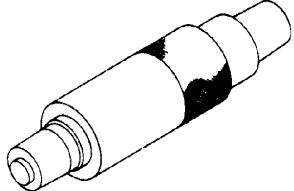
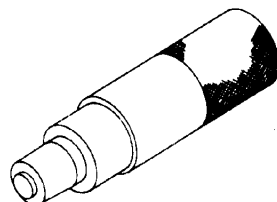
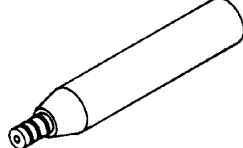
925640000 *3	926530000	926540000
SPANNER	BUSH A INSTALLER	BUSH A REMOVER
Big end: Used to loosen and tighten the lock nut when adjusting gear backlash of steering gearbox.	Used to install bush A into steering gearbox unit.	Used to remove bush A from VGR (Variable Gear Ratio) steering gearbox unit. For VGR steering gearbox
 A3-167	 L1-128	 L1-129

*3 SPANNER (926230000) for power steering can be used instead of this tool.

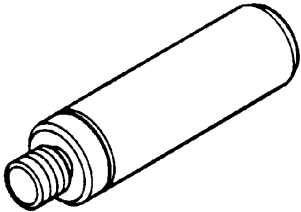
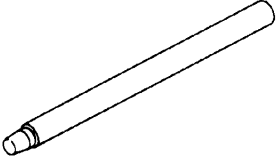
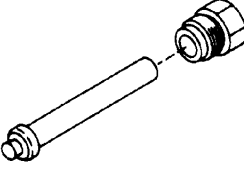


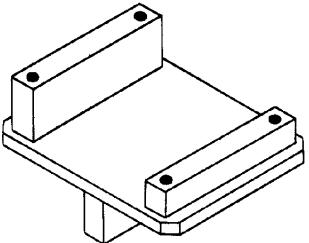
2. Steering Column

926720000	926730000	926740000
CLAMP	INSTALLER	STAND
Used when assembling steering column ASSY. Attach this tool to STAND.	Used to remove and install steering boss of pipe ASSY.	Used when disassembling and assembling steering column ASSY.
 L1-215	 L1-216	 L1-217

3. Power Steering




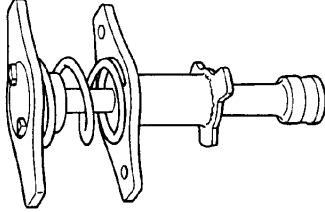
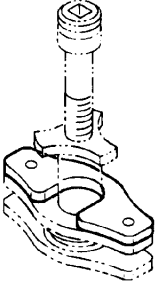
925700000	925711000 *4	926200000	926210000
WRENCH	PRESSURE GAUGE	STAND	ADAPTER A
Used to remove and install tie-rod. Apply this tool to rack.	Oil pump.	Used when inspection characteristic of gearbox ASSY and disassembling it. Vise this tool and secure gearbox ASSY using gearbox clamps.	Used with PRESSURE GAUGE.
 A18-233	 ST-175	 L1-130	 To Gauge L1-131
926220000	926230000	926240000	926250000
ADAPTER B	SPANNER	INSTALLER	GUIDE
Used with PRESSURE GAUGE.	For the lock nut when adjusting backlash of gearbox. Removal and installation of tie-rod. Measurement of rotating resistance of gearbox ASSY.	Oil seal of steering body ASSY.	Fit this tool to the left side of rack when installing seal holder ASSY into steering body ASSY.
 To Gauge L1-132	 L1-133	 INSTALLER A INSTALLER B INSTALLER C L1-281	 L1-190
926260000	926290000	926300000	926310000
REMOVER	REMOVER	INSTALLER	GUIDE
Seal holder snap ring.	Used to remove dust seal, back-up ring, Y-packing and ball bearing from valve housing. Used to install ball bearing into valve housing	Used to install dust seal, back-up ring and Y-packing into valve housing.	Input shaft.
 L1-191	 L1-194	 L1-195	 L1-196

*4 Interchangeable with former PRESSURE GAUGE (925710000).


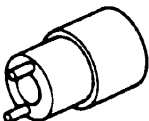
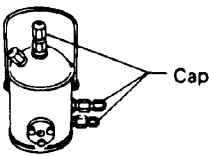
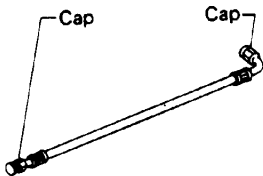
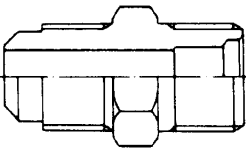
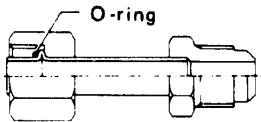

 

 


926320000	926330000	926420000	*926970000
INSTALLER	REMOVER	PLUG	INSTALLER
Attach this tool to the left side of rack when press-fitting back-up ring and oil seal to steering body ASSY.	Used to remove back-up ring and oil seal from steering body.	When oil leaks from pinion side of gearbox ASSY, remove pipe B from valve housing, attach this tool and check oil leaking points.	Oil seal of oil pump.
 L1-197	 L1-198	 L1-142	 L1-496
926980000	* 927020000		
GUIDE	JIG MOTOR PUMP ASSY		
Shaft and bearing ASSY of oil pump.	Used to over-haul MOTOR PUMP ASSY.		
 L1-497	 L1-571		

* Newly adopted tool


 
Brakes Tools

925460000	925471000	925600000	926430000
WHEEL CYLINDER 11/16" ADAPTER	DISC BRAKE CYLINDER PULLER	O-RING ADAPTER	DISC BRAKE PISTON WRENCH
Installing cup onto piston of rear drum brake wheel cylinder (size 11/16 in). Rear drum brake	Pressing cone spring (front disc brake). All models	Installing spindle O-ring (front disc brake). All models	Used with SPACER (926440000) to rotate front disc brake piston. All models
 A17-163	 ST-148	 A17-160	 L1-143
926440000			
SPACER			
Used as a set with WRENCH (926430000). Attach this tool to WRENCH using two 6-mm dia. bolts (length: less than 15 mm). All models			
 L1-144			

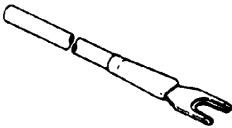
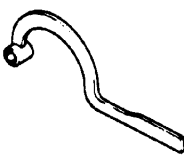

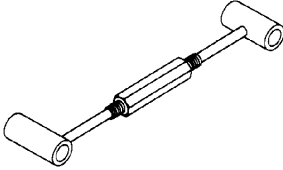
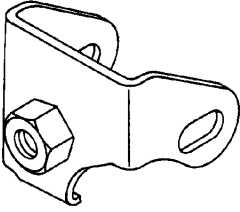
 
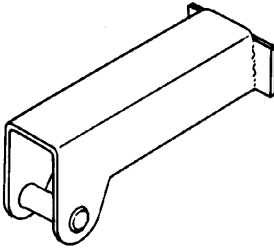
Air Conditioning System Tools

925770000	925790000	925800000 *6	925820000 *6
CLUTCH TIGHTENER	HUB NUT TIGHTENER	OIL SEPARATOR	FLEXIBLE HOSE
For holding clutch hub.	For tightening hub nut.	For withdrawing oil from refrigeration system.	(Used with OIL SEPARATOR)
 A26-045	 A26-047	 ST-176	 ST-178
925840000 *6	925850000 *6	926120000	926130000
DOUBLE UNION	CONNECTOR PIPE	SHAFT SEAL INSTALLER	CLUTCH ARMATURE REMOVER
(Used with OIL SEPARATOR)	(Used with OIL SEPARATOR)	For removing and installing shaft seal.	For clutch disassembly.
 ST-179	 ST-180	 L4-541	 A26-046
926140000	926150000	926160000	926170000
SHAFT ROTATOR	COVER PLATE REMOVER	HEXAGON SOCKET (8 mm)	FRONT COVER TIGHTENER
For assemble and rotation checking.	For cover plate removal.	For elbow removal and installation.	For shell removal and installation.
 L4-542	 L4-543	 L4-544	 L4-545

*6 Oil Separator Kit is composed of Oil Separator, Flexible Hose, Double Union and Connector Pipe.

926180000	926190000
HEXAGON SOCKET (10 mm)	INJECTOR NEEDLE
For cover end (R) removal and installation.	For discharging and charging gas.
	
L4-546	L4-547

Body Tools

925580000	925610000	926661000	927000000
PULLER	WRENCH	REMOVER	ENGINE SUPPORT ASSY
Trim clip.	Door hinge.	Used to remove and install trunk torsion bar.	For supporting engine. 1800 cc model
 ST-035	 ST-166	 L1-282	 L1-511
927010000	* 927150000	* 927160000	
BRACKET (ENGINE SUPPORT)	ENGINE SUPPORT ASSY	BRACKET (ENGINE SUPPORT)	
Used together with ENGINE SUPPORT ASSY. 1800 cc model	For supporting engine. 2700 cc model	Used together with ENGINE SUPPORT ASSY. 2700 cc model	
 L1-512	 L1-572	 L1-573	

* Newly adopted tool