

INDEX

Air Bleeding	4-4-45	Heater Unit	4-6-10
Air (Pneumatic) Suspension	4-1- 4	Hill-Holder	4-4- 7
Air Tank Assembly	4-1-43	Hill-Holder	4-4-18
Auto-Door Lock Actuator	5-2-14	Hill-Holder	4-4-42
Auto-Door Lock Switch	5-2-14	Hill-Holder	4-4-50
Automatic Shoulder Belt	5-3-24	Hood Lock	5-1-23
Blower Assembly	4-6-10	Hood Lock Release Cable	5-1-24
Brake Booster	4-4- 5	Inner Remote Assembly	5-2- 9
Brake Booster	4-4-17	Inner Trim	5-3- 8
Brake Booster	4-4-37	Inner Trim	5-3-19
Brake Fluid Level Indicator	4-4-45	Instrument Panel	5-4- 4
Brake Hose	4-4-40	Key Lock	5-2- 9
Checker	5-2- 8	(Manual Steering System)	4-3-31
Compressor	4-7-23	Master Cylinder	4-4- 2
Compressor Clutch	4-7-23	Master Cylinder	4-4-36
Compressor & Drier Assembly	4-1-42	Master Cylinder (Except XT6)	4-4-15
Condenser	4-7-35	Master Cylinder for XT6	4-4-16
Console Box	5-3-18	Microswitch	4-7-40
Control Valve (Power Steering Gearbox)	4-3-52	Motor Pump & Power Controller	4-3-75
Cover and Molding	5-1-37	Mud Guard	5-1-36
Disc Brake	4-4- 2	Mud Guard R	5-1-36
Door and Hinge	5-2- 7	Oil Pump (Power Steering System)	4-3-60
Door Glass	5-2-12	Outer Handle	5-2-10
Door Latch	5-2- 9	Outer Weatherstrip	5-2-10
Door Sash	5-2-13	Pad Wear Indicator	4-4- 2
Door Striker	5-2-14	Parking (Hand) Brake	4-4-19
Door Weatherstrip	5-2-10	Parking (Hand) Brake	4-4-44
Electronic-controlled Motor Drive Power Steering	4-3- 5	Pedal	4-5- 6
Entire Brake System	4-4-48	Pocket	5-4- 5
Evaporator	4-7-37	Power Steering System (Except for XT6)	4-3-15
Exhaust Cover	5-1-36	Power Steering System for XT6	4-3-17
Flexible Hose	4-7-38	Pressure Switch	4-7-40
Fluid Line (Power Steering System)	4-3-70	Proportioning Valve	4-4- 5
Front Air Suspension Assembly	4-1-39	Proportioning Valve	4-4-41
Front Axle	4-2- 2	Pulser Amplifier	4-7-41
Front Axle	4-2- 9	Rear Air Suspension Assembly	4-1-41
Front Axle	4-2-13	Rear Axle	4-2- 4
Front Ball Joint	4-1-33	Rear Axle	4-2-11
Front Bumper	5-1-25	Rear Axle (FWD)	4-2-24
Front Crossmember	4-1-32	Rear Axle (4WD)	4-2-26
Front Disc Brake	4-4-12	Rear Bumper	5-1-27
Front Disc Brake	4-4-20	Rear Coil Spring	4-1-36
Front Fender	5-1-35	Rear Disc Brake	4-4-13
Front Seat	5-3- 2	Rear Disc Brake	4-4-30
Front Seat	5-3-12	Rear Drum Brake	4-4-33
Front Stabilizer	4-1-31	Rear Drum Brake (FWD)	4-4-14
Front Strut Assembly	4-1-27	Rear Quarter Glass	5-2-23
Front Suspension	4-1- 2	Rear Seat	5-3- 4
Front Suspension Assembly	4-1-25	Rear Seat	5-3-12
Glass Stopper	5-2-13	Rear Suspension	4-1- 3
Ground Clearance Measuring (4WD Models Only)	4-1-24	Rear Suspension Assembly	4-1-34
Gusset	5-2-13	Rearview Mirror	5-1-36
Heater Control (Control Wing, Temperature Control Lever and Fan Switch Lever)	4-6-11	Rear Window Glass	5-2-23
		Receiver Drier	4-7-36
		Relay and Fuse	4-7-39
		Replacement of Brake Fluid	4-4-46

Roof Weatherstrip	5-2-11	Torsion Bar	5-1-24
Sealing Cover	5-2- 8	Trim Cushion and Trim Back	
Seat Belts	5-3- 5	(1800 cc DL model)	5-3-13
Seat Belts	5-3-14	Trim Panel	5-2- 7
Stabilizer	5-2-11	Trunk Lid	5-1-24
Steering Column	4-3- 3	Trunk Lid Lock Assembly and Key Cylinder	5-1-25
Steering Column	4-3-13	VGR (Variable Gear Ratio) Gear Box	4-3- 2
Steering Column	4-3-18	Wheel and Tire	4-2-29
Steering Gearbox		Window Regulator	5-2-12
(Manual Steering System)	4-3-31	Windshield	5-2-20
Steering Gearbox			
(Power Steering System)	4-3-41		