

INDEX

Alternator	6-1- 14	Instrument Panel Wiring Harness	6-3- 14
Analogue Meter	6-2- 21	Lighting System	6-3- 60
Antenna	6-2- 45	Mode Selector	6-3-138
Automatic Shoulder Belt and Key Warning		Parking Brake System	6-3-105
Chime	6-2- 61	Pneumatic Suspension System	6-3-140
Automatic Transmission Control System	6-3-109	Power Supply Routing	6-3- 36
Back-up Light	6-3- 71	Power Window	6-2- 56
Battery	6-2- 12	Power Window	6-3-126
Blower Motor	6-3-139	Power Window Main Harness and Door	
Brake Fluid Level Warning System	6-3-106	Cord	6-3- 24
Clock	6-3-121	Radio	6-2- 44
Combination Meter	6-2- 18	Radio and Auto Antenna	6-3-115
Combination Meter	6-3- 43	Rear Window Defogger	6-2- 47
Combination Switch	6-2- 35	Rear Window Defogger	6-3-122
Common Grounding	6-3- 26	Rear Wiring Harness	6-3- 18
Control Wing	6-2- 36	Remote Controlled Rearview Mirror	6-2- 58
Cruise Control	6-2- 48	Remote Controlled Rearview Mirror	6-3-124
Cruise Control System	6-3-133	Retractable Headlight	6-2- 40
Differential Lock Switch	6-2- 59	Room Light and Door Switch	6-3- 74
Digital Clock	6-2- 47	Seat Belt and Key Warning Chime	6-2- 62
Distributor	6-1- 24	Seat Belt and Key Warning System	6-3- 78
Door Lock System	6-3-130	Spark Plug	6-1- 26
Electronic-Controlled Motor Drive		Speed Alarm	6-3-131
Power Steering System	6-3- 91	Speed Warning Buzzer	6-2- 60
Engine Electrical System	6-3- 39	Starter	6-1- 10
Engine Wiring Harness	6-3- 12	Stop Light	6-3- 72
First Hold Switch	6-2- 59	Telltale (Graphic Monitor)	6-2- 20
Fog Light Switch	6-2- 60	Trip Computer	6-2- 24
Front Fog Lamp	6-3- 66	Trip Computer	6-3- 57
Front Wiring Harness	6-3- 8	Trunk Room Light	6-3- 77
Fuse	6-2- 13	Turn Signal and Hazard Warning Light	6-3- 67
Headlight Washer	6-3-114	Windshield Wiper & Washer	6-3-113
Horn	6-2- 47	Wiper and Washer	6-2- 42
Horn and Cigarette Lighter	6-3-118	Wiper Intermittent Control System	6-2- 43
Ignition Coil	6-1- 25	4WD-MT System	6-3-107
Ignition Switch	6-2- 34		